


## Ersatzteile / Spare Parts PS660


1	37-120-2	Hauptelektronik EPS-HP1040 PS660/990	Main PC-Board EPS-HP1040 PS660/990
2	37-120-3	Sekundärfilter EPS-SF1042 PS660/990	Secondary Filter EPS-SF1042 PS660/990
3	36-35	Haupttransformator PS660	Main Transformer PS660
5	36-37	HF-Drossel	HF-Inductor
6	37-15-2	Steuertrafo Plasma (in 37-120-2 enthalten)	Aux-. Transformer (part of 37-120-2)
7	39-29-1	Pilotwiderstand PS660 (10R)	Pilot Resistor PS660 (10R)
8	55-10	Gleichrichter PS660	Rectifier PS660
10	37-17	Hauptschütz A9	Main Contactor A9
9	37-17	Pilotschütz A9	Pilot contactor A9
11	56-06	Hauptschalter 0-1	Mains Switch 0-1
13	37-12-PS	Magnetventil 24V/50Hz Plasma	Solenoid 24V/50Hz Plasma
14	39-28-DR	Druckregler Frontplatte	Pressure regulator Front Plate
15	39-27	Druckschalter 2-6bar G1/8	Pressure Switch 2-6bar G1/8
16	39-28-MA	Manometer Frontring 50mm G1/4	Pressure Gauge 50mm G1/4
17	39-28-MU	Schalttafelmutter	Nut for Gauge
18	39-27-1	Tülle G1/8 6mm	Air connector G1/8 6mm
19	39-27-2	Tülle innen G1/4 6mm	Air connector G1/4 6mm inside
20	39-27-3	Tülle außen G1/4 6mm	Air connector G1/4 6mm outside
21	39-27-4	Nippel NW 7.2 1/4	Quick connector NW 7.2 1/4
22	37-25	Lüfter 120x120 230V	Ventilator 120x120 230V
23	39-28-S	Standard-Filter	Standard Air Filter
24	37-95	Bockrolle 100mm	Castor 100mm
25	37-94	Lenkrolle 100mm	Swivel Castor 100mm
26	38-04	Einbaubuchse T50	Earth Terminal T50
27	39-28-EB	Einbaubuchse DIX50/70 G1/4	Torch Terminal DIX50/70 G1/4
28	37-35-3	Netzkabel 5m 4x2,5 mit Stecker 32A	Mains Cable 5m 4x2,5 with plug 32A
29	37-36-01	Kabelverschraubung PG16	Cable fixing PG16
30	39-60	Brenner CB70 ergocut 6m G1/4	Torch CB70 ergocut 6m G1/4
31	37-97-1	Handgriff	Handle

## Ersatzteile / Spare Parts PS990


1	37-120-2	Hauptelektronik EPS-HP1040 PS660/990	Main PC-Board EPS-HP1040 PS660/990
2	37-120-3	Sekundärfilter EPS-SF1042 PS660/990	Secondary Filter EPS-F1042 PS660/990
3	36-35-990	Haupttransformator PS990	Main Transformer PS990
4	36-35-DR9	Netzdrossel PS990	Mains Inductor PS990
5	36-37	HF-Drossel	HF-Inductor
6	37-15-2	Steuertrafo Plasma (in 37-120-2 enthalten)	Aux-. Transformer (part of 37-120-2)
7	39-29-1 (2x)	Pilotwiderstand PS660 (10R+6R8)	Pilot Resistor PS660 (10R + 6R8)
8	55-10-120	Gleichrichter PS990	Rectifier PS990
9	37-17	Pilotschütz A9	Pilot contactor A9
10	37-19	Hauptschütz BF18	Main Contactor BF18
11	56-09	Hauptschalter 0-1-2	Mains Switch 0-1-2
12	37-12-15	Magnetventil 24V Plasma 1,5mm	Solenoid 24V/50Hz Plasma
13	37-12-TE	Magnetventil 24V/50Hz Plasma	Solenoid 24V/50Hz Plasma
14	39-28-DR	Druckregler Frontplatte	Pressure regulator Front Plate
15	39-27	Druckschalter 2-6bar G1/8	Pressure Switch 2-6bar G1/8
16	39-28-MA	Manometer Frontring 50mm G1/4	Pressure Gauge 50mm G1/4
17	39-28-MU	Schalttafelmutter	Nut for Gauge
18	39-27-1	Tülle G1/8 6mm	Air connector G1/8 6mm
19	39-27-2	Tülle innen G1/4 6mm	Air connector G1/4 6mm outside
20	39-27-3	Tülle außen G1/4 6mm	Air connector G1/4 6mm inside
21	39-27-4	Nippel NW 7.2 1/4	Quick connector NW 7.2 1/4
22	37-113	Lüfter 150mm 230V	Ventilator 150mm 230V
23	39-28-S	Standard-Filter	Standard Air Filter
24	37-95	Bockrolle 100mm	Castor 100mm
25	37-94	Lenkrolle 100mm	Swivel Castor 100mm
26	38-04	Einbaubuchse T50	Earth Terminal T50
27	39-28-EB	Einbaubuchse DIX50/70 G1/4	Torch Terminal DIX50/70 G1/4
28	37-35-3	Netzkabel 5m 4x4,0 mit Stecker 32A	Mains Cable 5m 4x4,0 with plug 32A
29	37-36-01	Kabelverschraubung PG16	Cable fixing PG16
30	39-70	Brenner CB100-6m komplett, G1/4	Torch CB100-6m, complete, G1/4
31	37-97-1	Handgriff	Handle

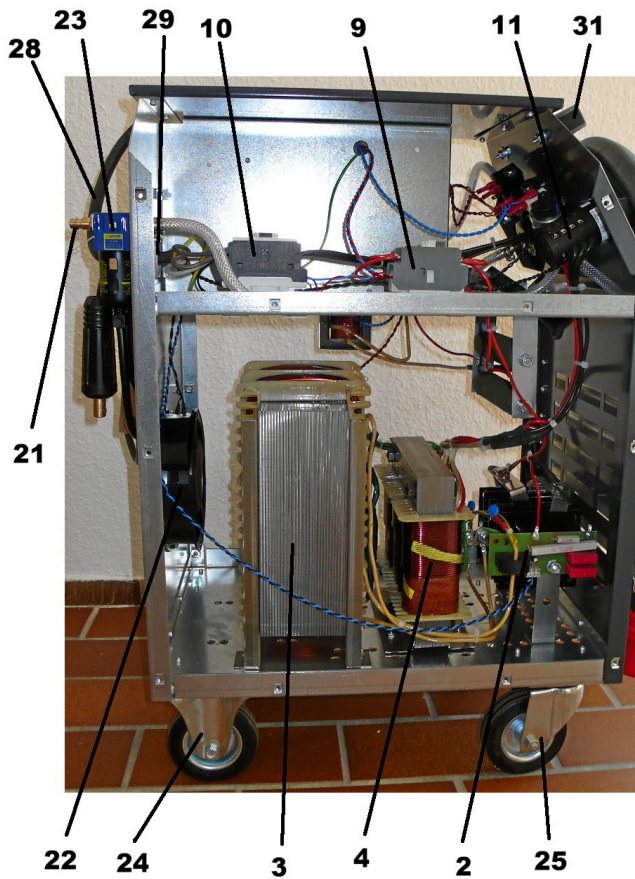

**PS990 View from left side (PS660 – similar)**

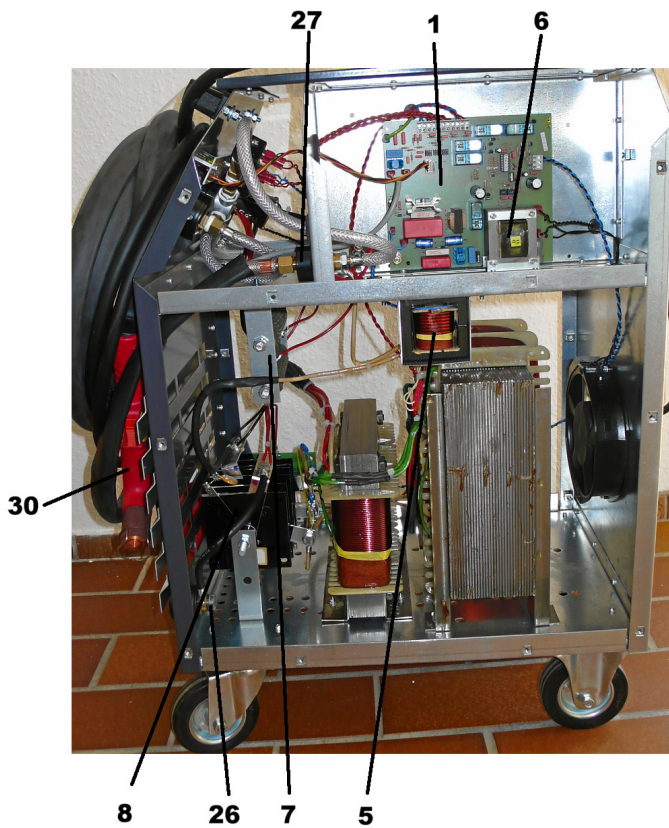

**PS990 - View from right side (PS660 – similar)**

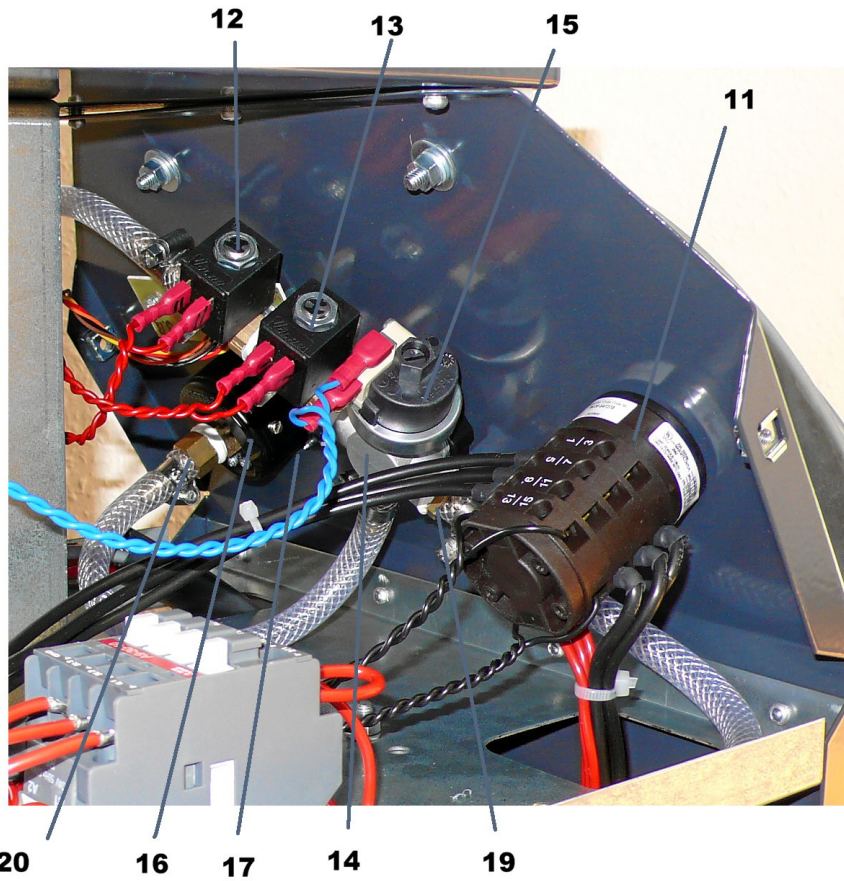

**PS990 – Inside View (PS660 – similar)**